
MP10 model railway motor switch



The motor switch is used for electric operation of the two-position mechanisms in models such as turnout pointsThe travel distance can be set in four steps, 3 mm,6mm 9mm and12mm see the illustration.

It is possible to use two control modes - 3 wire mode, like electromagnets or two wire bipolar, like common motor switch, with a current consumption aprox 150 mA during motion. The mechanism has a end of travel detection switch, i.e. the control voltage can be applied permanently, to be disconnected automatically once a respective position is reached and the motion stops. For accessory and frog control purposes, there are two indepednt 1-amp switch

SPDT contacts.

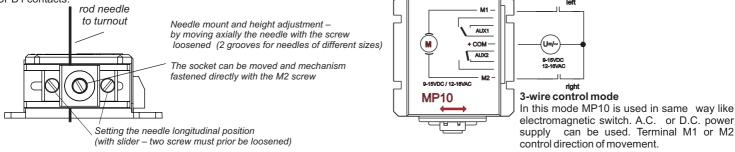





2-wire mode

Motor switch and its direction can be controlled by changing of polarity of
power supply. Only DC voltage can be used 8-16V.

direction direction right AUX1 AUX1 AUX1 AUX2 B 19/DC / 12-16/AC M2 MP10

How to change the distance of travel

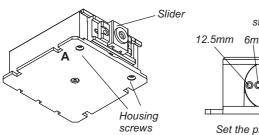



Set the pin to the desired position

steps

- A) Unscrew 2 screws on the housing bottom
- B) Remove the slider assembly
- C) Set the pin to a desired position
- D) Reassemble the set and fit the housing. Carefully retighten screws.

The switches must get in contact with cams, but beware of plastic parts while retightening. Excessive effort might cause damage to them; try with the screw A first.


Model repairs

The warranty is applicable to defects in manufacture only. The product is intended for use at your home only in models, not within commercial or industrial applications. Warranty repairs can be claimed with the manufacturer and/or through a vendor. For contact details visit www.mtb-model.com. Return the product to a electro-wastes collecting point at the end of its life! Manufacturer: MTB, Segala group s.r.o. Prague 10 Czech rep.


2-wire mode Motor switch and its direction can be controlled by changing of polarity of

power supply. Only DC voltage can be used 8-16V.

How to change the distance of travel

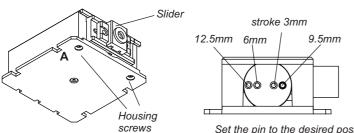

Set the pin to the desired position

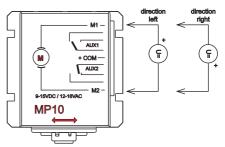

steps

- A) Unscrew 2 screws on the housing bottom
- B) Remove the slider assembly
- C) Set the pin to a desired position
- D) Reassemble the set and fit the housing. Carefully retighten screws.

The switches must get in contact with cams, but beware of plastic parts while retightening. Excessive effort might cause damage to them; try with the screw A first.

Model repairs

The warranty is applicable to defects in manufacture only. The product is intended for use at your home only in models, not within commercial or industrial applications. Warranty repairs can be claimed with the manufacturer and/or through a vendor. For contact details visit www.mtb-model.com. Return the product to a electro-wastes collecting point at the end of its life! Manufacturer: MTB, Segala group s.r.o. Prague 10